



FEATURES

- GSP115 IS THE 115VAC INPUT VERSION
- GPS115E MOUNTS IN THE “E” VERSIONS
- WORKS WITH BOTH 50 AND 60 Hz
- SURGE/TRANSIENTS INPUT PROTECTION
- ELECTRICAL NOISE INPUT PROTECTION
- 12VDC NON-REGULATED 90 mA OUTPUT
- SHORT CIRCUIT OUTPUT PROTECTION
- OVER CURRENT OUTPUT PROTECTION
- SMALL SIZE
- SCREW TERMINALS FOR WIRES 22-12 AWG (2.5 mm² max)

APPLICATIONS

- TO POWER [GFC110](#), [GFC111](#) OR OTHER FLOW COMPUTERS / TOTALIZERS
- MOUNTABLE IN THEIR ENCLOSURE
- TO POWER OTHER DEVICES IN THE SAME ENCLOSURE
- TO BE USED AS A STAND ALONE POWER SUPPLY FOR OTHER DEVICES



1. DESCRIPTION

The GPS115 is a non-regulated power supply that can be used to power GFC100 series flow computers / totalizers mounted in the same enclosure thus saving space, reducing the cost and providing surge, transients and noise protection to the high voltage AC input and short circuit and over current protection to the 12VDC/90 mA non-regulated output.

GPS115E mounts inside the enclosures of the “E” versions of our flow computers / totalizers.

GPS115 can also be used to power other devices mounted in the same enclosure or as a stand alone power supply for a variety of devices.

It works with both 50 and 60 Hz input frequencies.



2. ABSOLUTE MAXIMUM RATINGS *

Operating temperature	-40 °C to +85 °C
Input Voltage	115VAC +15/-20%
Minimum Input Frequency	43 Hz
Maximum output current	90 mA DC, 25 °C

NOTICE: Stresses above those ratings may cause permanent damage to the device.

3. CHARACTERISTICS, Input Voltage 115VAC, 60 Hz, 25 °C

Parameter	Conditions	Typical	Units
Output Voltage	Output Current 20 mA	19	VDC
	Output Current 90 mA	12	
Output Ripple	Output Current 20 mA	0.2	Vpp
	Output Current 90 mA	0.6	

4. APPLICATION

4.1 MECHANICAL

The board of GPS115 is designed to be mounted into the enclosure of GFC100 series flow computers / totalizers.

The board of GPS115E is designed to be mounted into the enclosure of GFC100E series flow computers / totalizers.

4.2 ELECTRICAL

The input voltage 115 VAC has to be applied to the terminal J1.

**NOTE: For safety earth ground must be connected to the “GND” terminal !
Disconnect the high voltage before doing any work on GPS115 or GPS115E !**

The earth ground must be connected to the “GND” terminal in order to achieve the best performance of GPS115.

The output voltage is on terminal J2.

Fig. 2 shows the proper connections of the input and output voltage.

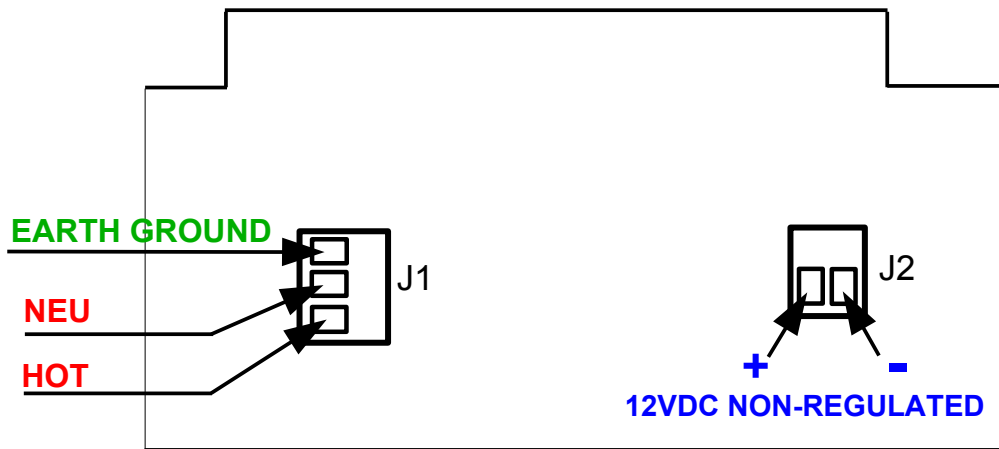


Fig. 2 Electrical connections to GPS115, GPS115E

NOTE: GPS115 and GPS115E are the 115 VAC version. Apply 115VAC to “NEU” and “HOT” terminals.
Applying 220VAC will damage the device !

5. ORDERING

For ordering please use the following G Instruments part numbers:

<i>Description</i>	<i>G Instruments PN</i>
GPS115 power supply board, 115VAC to 12VDC/90mA non-regulated	30100
GPS115 mounted in a blind water proof enclosure with 2 cable glands	30143
GPS115E power supply board, 115VAC to 12VDC/90mA non-regulated	30460
GPS115E mounted in a blind weather proof enclosure with 2 cable glands	30461



IMPORTANT NOTICE

G Instruments reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products at any time without notice.

Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete.

G Instruments does not assume any liability arising from the use of any device or circuit described herein, nor does it convey any license under its patent rights or the rights of others.

Customers are responsible for their products and applications using G Instruments devices. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

G Instruments products are not authorized for use as critical components in life support devices or systems without express written approval of G Instruments.

Trademarks and registered trademarks are the property of their respective owners.