



FEATURES

- ACCEPTS 0-20 mA, 4-20 mA, 0-5V, 0-10V, 1-5V, 2-10V, PROGRAMMABLE
- ACCEPTS PASSIVE AND ACTIVE DEVICES
- THE INPUT IS OVER CURRENT AND OVER VOLTAGE PROTECTED
- TOTAL ERROR LESS THAN 0.01% FS, TYPICAL UNDER 0.005% FS
- SIX 14.2 mm (0.56") HIGH DIGITS, BRIGHT RED LED DISPLAY
- POWERS THE SENSOR (IF PASSIVE) WITH 24VDC REGULATED, SHORT CIRCUIT AND OVER CURRENT PROTECTED
- PROGRAMMABLE DIGITAL FILTER
- PROGRAMMABLE NUMBER TO BE DISPLAYED FOR 0% AND FOR 100% INPUT IN THE RANGE FROM -199,999 TO 999,999
- PROGRAMMABLE DECIMAL PLACES
- POWER SUPPLY 15-40VDC, 1.7VA WITH SURGE, TRANSIENTS AND REVERSE POLARITY PROTECTION, ISOLATED (OPTION)
- PROGRAMMABLE THROUGH RS232 MODBUS RTU
- TWO WIRE ONLY CONNECTION TO ALL OF OUR FLOW COMPUTERS AND MANY OTHERS
- WEIGHT LESS THAN 145 g (5.1 oz)
- DIN 43700 PANEL MOUNT 48x96 mm ENCLOSURE. SELF-EXTINGUISHING PPO

APPLICATIONS

- TO POWER, MEASURE AND DISPLAY ANALOG SIGNALS FROM VARIOUS SENSORS AND DEVICES
- DISPLAY FLOW RATE SIGNAL FROM ALL OF OUR FLOW COMPUTERS AND MAGMETERS
- PROCESS INDICATORS
- TEMPERATURE DISPLAYS
- PRESSURE DISPLAYS
- 6 DIGIT VOLTMETERS
- 6 DIGIT mA METERS



1. DESCRIPTION

GRD101 is the analog input version of our remote displays series. It can accept passive or active signals from any sensor or device, scale and display them on a bright red 6 digit display. The input signal is filtered and conditioned, then accurately measured. After that our special proprietary algorithms further process the signal and provide programmable digital filter to the user. Our proprietary adaptive/predictive self-adjusting digital filter or a few others can be chosen.

Both numbers for 0% and 100% input are programmable in a range from -199,999 to 999,999. Also programmable are the decimal places from none to 5 thus offering the ability to display very small to very big numbers both positive and negative.

All the programming is done by a very simple and easy to use software that saves you time and effort offering you the comfort of using a computer keyboard, monitor and mouse instead of 2 - 3 buttons on the front panel and menus with 2 or 3 letters. After entering all numbers a "save" button does it all. Using a laptop the programming can be done on the field to already installed and working remote displays.

The communication with GRD101 displays is a RS232 MODBUS RTU, so a PLC or another equipment can also be used to program or read data from GRD101.

If an external RS232 to RS485 converter is used the display can be connected to a MODBUS network.



2. ABSOLUTE MAXIMUM RATINGS *

| | |
|--|----------------|
| Operating temperature | 0 °C to +70 °C |
| Continuous input voltage, DIP switches for a voltage input | 150 V DC |
| Continuous input current, DIP switches for a current input | 30 mA DC |
| Sensor consumption | 30 mA DC |
| Power supply voltage | 40 V DC |

* **NOTICE: Stresses above those ratings may cause permanent damage to the device.**

3. CHARACTERISTICS

| Parameter | Conditions | Min | Typ | Max | Units |
|-------------------------|--|-----|--------|------|--------|
| Power Supply | | | | | |
| Voltage | 25 °C, non-isolated power version | 15 | | 36 | V DC |
| Voltage | 25 °C, isolated power version | 18 | | 36 | V DC |
| Power Consumption | 25 °C, 24 VDC, display at '888888', sensor consumption 20 mA | | | 1.7 | VA |
| Input | | | | | |
| Input resistance | Input 0-20 mA or 4-20 mA, 25 °C | | 255 | | ohm |
| Input resistance | Input 0 – 5V or 1 – 5V | 100 | | | kohm |
| Input resistance | Input 0 – 10V or 2 – 10V | 200 | | | kohm |
| Sensor Power | | | | | |
| Voltage | 25 °C, non-isolated power version, NOTE 1 | 15 | | 36 | V DC |
| Voltage | 25 °C, isolated power version, NOTE 2 | | 24 | | V DC |
| Accuracy | | | | | |
| Error | Input 0 – 20 mA, 24 V, 25 °C, NOTE 3 | | 0.005 | 0.01 | % FS |
| Temperature coefficient | Input 0 - 5V, 0 °C to +70 °C , 24 V DC | | 25 | | ppm/°C |
| RS232 | | | | | |
| TxD voltage levels | 0 °C to +70 °C, receiver input resistance 5 kohm | | +/-5.5 | | V DC |

Note 1: When the power of GRD101 is not isolated the voltage to the sensor equals the power supply voltage

Note 2: When the power of GRD101 is isolated the voltage to the sensor is 24 VDC regulated, regardless of the power supply voltage

Note 3: The parameter includes all errors, non-linearity and noise at constant voltage and temperature

4. PROGRAMMING

All the programming can be done using G Instruments' GRD Master software or using a PLC, terminal, computer or another equipment that has MODBUS RTU capabilities over RS232.

4.1. Programming using GRD Master software

4.1.1. Connect your GRD101 remote display to the serial port of your computer or lap top using a DB9M to DB9F extension cable. If your computer does not have a serial port use a USB to serial converter and connect the extension cable to it. You may need to install the driver(s) for that converter.

4.1.2. Start the “GRD Master” software, choose the serial port where the display is connected to and click on the “**Connect**” button. The software will automatically recognize the hardware options of the connected GRD101 remote display and show all choices on the screen.

4.1.3. Choose the type of the input you want to use on your remote display.

NOTE: There can be a DIP switch on the rear panel of the display that must be set accordingly as well.

4.1.4. Enter the number for 0% input, the number for 100% input and the decimal places to be displayed.

4.1.5. A digital filter setting can be chosen among 'auto' and one through seven, one meaning the lowest (fastest) filtering.

4.1.6. Program the cut off.

For a stand alone remote display that would be all programming.

4.1.7. There is one more parameter to program only if the device is intended to work on a MODBUS network. This is the MODBUS address. If the device will not be working on a MODBUS network leave this parameter to its default setting:


MODBUS address = 1

4.1.8. Clicking on the “**Write**” button will finish the programming process. A few seconds later the cable can be removed and the remote display will be ready to work.

5. APPLICATION

5.1. ELECTRICAL

On the rear panel there are 2 terminals for the power and 3 terminals for the sensor.

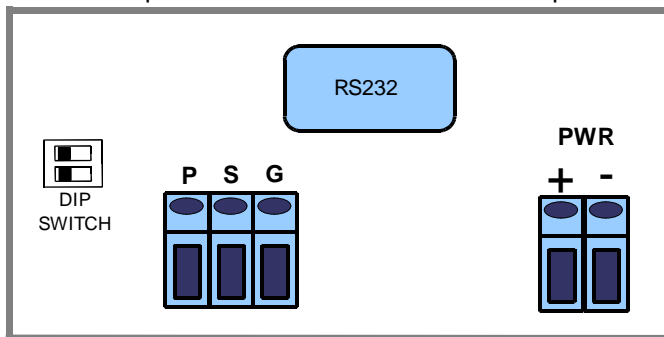

P – sensor power

S – signal from the sensor

G – sensor ground

NOTE 1: On the non-isolated version there is no isolation between “-” of the power supply and sensor ground.

NOTE 2: Current only version GRD101-0 does not have DIP switch on the rear panel

5.1.1. Wiring

5.1.1.1. Current input, passive sensor, loop power




(GFC1xx series flow computer)

GRD101 powers the sensor and measure its current using 2 wires.


NOTE: Use this diagram to connect all of our flow computers to GRD101 remote displays.

5.1.1.2. Current or voltage input, active sensor

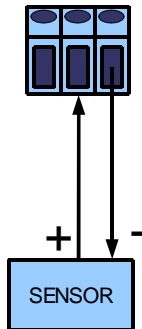

The sensor has its own power and GRD101 only measures its signal (current or voltage).

5.1.1.3. Three wire connection

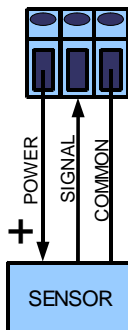

GRD101 powers the sensor and measures its signal (current or voltage). If the signal is current the sensor must be sourcing current out of "signal".

5.1.2. DIP Switches

There are 2 DIP switches on the rear panel if the version of the display is for both voltage and current. The upper switch chooses between current and voltage input. The lower switch chooses between 5V and 10 V for a voltage input.

NOTE: The input type must be programmed accordingly through the serial port. Look at the table below.

5.1.2.1. Current 0-20 mA



Program the input type to be 0.

5.1.2.2. Current 4-20 mA



Program the input type to be 1.

5.1.2.3. Voltage 0-5V



Program the input type to be 2.

5.1.2.4. Voltage 0-10V



Program the input type to be 3.

5.1.2.5. Voltage 1-5V



Program the input type to be 4.

5.1.2.6. Voltage 2-10V



Program the input type to be 5.



5.2. MECHANICAL

5.2.1. Dimensions

The front panel has dimensions 48 x 96 mm (1.89" x 3.78"). The maximum length/depth including rear panel terminals is 100 mm (3.94").

5.2.2. Cut out

The cut out dimensions are:

- width 92 mm, max 92.8 mm (3.622", max 3.654")
- height 45 mm, max 45.6 mm (1.772", max 1.795")

6. COMMUNICATION

GRD101 communication port is a 3 wire RS232 – TxD, RxD and common. The connector is DB9 female. Pin 5 is the common, pin 3 is in-coming data from the master (PC) to GRD101, pin 2 is out-going data from GRD101 to the master.

The serial port settings are: baud rate 19 200, 8 bit character, 1 stop bit, even parity, no handshaking.

The communication protocol is MODBUS RTU. Functions 0x03 (read holding registers), 0x04 (read input registers) and 0x06 (write a single holding register) are implemented. The remote display handles exceptions 1, 2, 3 and 6.

Here are the registers implemented:

| Register address | Register Type | Read/Write | Description | Format |
|-------------------------|----------------------|-------------------|--|----------------------------------|
| 21 | Input | R | Returns the input signal in percents | 0 – 10000 = 0.00% – 100.00% |
| 1000 | Holding | R/W | MODBUS slave address | 1 - 247, default is 1 |
| 1001 | Holding | R/W | Digital filter | 0 – 7, default is 0 = auto |
| 1007 | Holding | R/W | Cut OFF | 0-50 = 0.0 – 5.0 %, default is 1 |
| 1018 | Holding | R/W | Value for 0% signal, high, NOTE 1 | Default is 0 |
| 1019 | Holding | R/W | Value for 0% signal, low, NOTE 1 | Default is 0 |
| 1020 | Holding | R/W | Decimal places of the value for 0% signal, NOTE 1 | 0 – 5, default is 0 |
| 1021 | Holding | R/W | Value for 100% signal, high, NOTE 1 | Default is 0 |
| 1022 | Holding | R/W | Value for 100% signal, low, NOTE 1 | Default is 100 |
| 1023 | Holding | R/W | Decimal places of the value for 100% signal, NOTE 1 | 0 – 5, default is 0 |
| 1024 | Holding | R/W | Input type, NOTE 2 | Default is 4-20 mA |
| 1025 | Holding | R/W | Decimal places to display | 0 – 6, default is 6 = auto |

NOTE 1: This is a 4 byte signed long integer.

Example: In order to set the display value for 0 % signal to -12.44 the master software has to send -1244 (signed long integer) and 2 for the decimal places:



high = 0xFFFF
low = 0xFB24
decimal places = 2

The GRD101 software will validate if the value is within the range of -199,999 to 999,999 and will reply with exception 3 if it is not.

NOTE 2: The input type that can be programmed depends on the hardware version of the remote display. For GRD101-0 and GRD101-0-ISO the input type can only be 0 (0 – 20 mA) or 1 (4-20 mA).

For GRD101-1 and GRD101-1-ISO the input type can be programmed to be:

0 = 0-20 mA
1 = 4-20 mA
2 = 0-5V
3 = 0-10V
4 = 1-5V
5 = 2-10V

NOTE that the DIP switches on the rear panel must be set accordingly. Look at 5.1.2. above.

7. VERSIONS OF GRD101

7.1. Current input only

This version has no DIP switches on the rear panel. It can be with or without isolation on the power supply.

GRD101-0 is the non-isolated version. This is the lowest cost version of GRD101. Because the 4-20 mA output of all of our flow computers is isolated this version is an excellent choice to remotely display flow rate from GFC1xx series flow computers. It requires 15-36 VDC and the same voltage powers the sensor.

GRD101-0-ISO is the isolated version. It is recommended for applications where the sensor is not well known, it is not a GFC1xx series flow computer or there are a few devices connected together and to GRD101. The isolation will prevent from ground loops and reduce the noise. It requires 18-36VDC power. The voltage for the sensor is always 24VDC regulated and it is isolated from the power supply.

7.2. Current and voltage input

This version accepts current and voltage signals. There are 2 DIP switches on the rear panel to control the input type.


GRD101-1 is the non-isolated version. It is a good choice if the sensor is well known and there are no other devices connected to the sensor or to GRD101.

GRD101-1-ISO is the isolated version. It is recommended for all other cases.

8. POWER SUPPLY

GRD101 can be powered by any DC adapter for 18 – 36VDC or by another device.

An excellent choice for a power supply is the adapter GPS124 on the picture below that we offer. It provides 24VDC / 250 mA regulated and filtered. It also has high isolation, protection and small size.

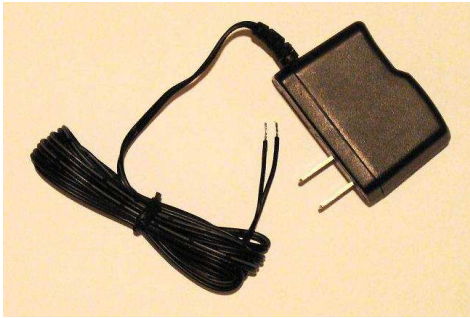

9. ORDERING

For ordering please use the following G Instruments part numbers:

| <i>Description</i> | <i>G Instruments PN</i> |
|--|-------------------------|
| GRD101-0 remote display, current only, non-isolated | 30139 |
| GRD101-1 remote display, voltage and current, non-isolated | 30140 |
| GRD101-0-ISO remote display, current only, isolated | 30141 |
| GRD101-1-ISO remote display, voltage and current, isolated | 30142 |
| GPS124 power supply, 115VAC to 24VDC/0.25A, regulated | 30138 |
| RS232 extension cable, DB9M to DB9F, 6' long | 30175 |
| GRD Master programming software | 30176 |



IMPORTANT NOTICE

G Instruments reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products at any time without notice.

Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete.

G Instruments does not assume any liability arising from the use of any device or circuit described herein, nor does it convey any license under its patent rights or the rights of others.

Customers are responsible for their products and applications using G Instruments devices. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

G Instruments products are not authorized for use as critical components in life support devices or systems without express written approval of G Instruments.

Trademarks and registered trademarks are the property of their respective owners.